





- **1.** Make sure that the WI-FI dongle is inserted into the inverter and have a laptop or a PC that has access to the WIFI.
- On a windows PC / laptop go to the WIFI settings and press the Wi-Fi icon as shown:



3. Options like this should appear. Try to find AP_XXXXXXXX





4. Press it and click connect as shown below:

5. It will say connecting.... Leave the option and open the Google's Chrome browser



6. Open Google's chrome browser or Firefox and in the URL bar type in the following IP Address: 10.10.100.254



7. If it asks for any username or password, please enter **admin** and **admin** for both

10.10.100.254	× +				- 0
← → C ③ 10.10	0.100.254				☆ 8
		Sign in			
		http://10.10.100.254			
		Your connection to this site is not priv	vate		
		Username			
		Password			
			Sign in Cancel		
Type here to s		J # C 🖬 🕵 🦻	<u>18</u>	я ^я ^ 🍕 🖿 <u>б</u> а	ຊ່× ENG 10:56 AM 10/05/2019
You will see					U* ENG 10/05/201
			0.100.254	パ へ	10/05/2019
You will see				Ċ ⊄X English Help	10/05/2019
You will see	e this:	10.10		♪ 中文 English Help The device can be used as	10/05/2019
You will see	e this:	Inverter information Inverter serial number Firmware version (main)	0.100.254	さ 中文 English Help The device can be used as a wireless access point (AP mode) to facilitate users to	10/05/2019
You will see	e this: Status Wizard	Inverter information Inverter serial number Firmware version (main) Firmware version (slave)	0.100.254 030AC0181060052	C ⊕文 English Help The device can be used as a wireless access point (AP	10/05/2019
You will see	e this: Status Wizard Quick Set	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model	0.100.254 030AC0181060052	C C #文 English Help The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal	10/05/2019
You will see	e this: Status Wizard Quick Set Advanced	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model Rated power	0.100.254 030AC0181060052	C 中文 English Help The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless	10/05/2019
You will see	e this: Status Wizard Quick Set Advanced Upgrade	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model Rated power Current power	0.100.254 030AC0181060052 	こ 中文 English Help The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the	10/05/2019
You will see	e this: Status Wizard Quick Set Advanced Upgrade Restart	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model Rated power Current power Yield today	0.100.254 030AC0181060052 	C 中文 English Help The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router. Status of remote server	10/05/2019
You will see	e this: Status Wizard Quick Set Advanced Upgrade Restart	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model Rated power Current power Yield today Total yield	0.100.254 030AC0181060052 	こ 中文 English 日日 日日 日日 日日 日日 日日 日日 日日 日日 日	10/05/2019
You will see	e this: Status Wizard Quick Set Advanced Upgrade Restart	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model Rated power Current power Yield today Total yield Alerts	0.100.254 030AC0181060052 	C C P\$\$\\$ English C P\$\$ P\$ P\$	UX ENG 10/05/2019
You will see	e this: Status Wizard Quick Set Advanced Upgrade Restart	Inverter information Inverter serial number Firmware version (main) Firmware version (slave) Inverter model Rated power Current power Yield today Total yield	0.100.254 030AC0181060052 	C 中文 English Help The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router. Status of remote server +Not connected: Connection to server failed	UX ENG 10/05/2019

	10.10.100.254	
		中文 English
		Help
Status Wizard Quick Set Advanced Upgrade Restart Reset	Please select your current wireless network: Site Survey Site Survey DIRECT-448D8B5C 46:02:44:8D:8:5C 37 1 HOOPERSALLS 8:76:FF:43:A8:52 47 1 Scanbrands 28:06:88:5D:68:FC 18 6 Solis Guest B4:FB:E4:F4:58:F9 82 11 Solis B6:FB:E4:F4:58:F9 82 11 Solis C:FB:E4:F4:58:F9 82 11 Solis C:FB:E4:F4:58:F9 82 11 Solis C:FB:E4:F4:58:F9 82 11 Solis B6:FB:E4:F4:58:F9 82 11 Solis C:FB:E4:F4:58:F9 82 C:FB:E4:F4:58:F9 82 C:FB:E4:F4:58:F9 82 C:FB:E4:F4:58:F9 82 C:FB:E4:F4:58:F9 82 C:FB:E4:F4:58:F9 82 C:FB:E4:F4:58:F9 82	The setup wizard will assist you to complete the device setting within one minute.

10. Find your Home's Wi-Fi name, it could be Telstra or DODO or anything that you use to browse internet at your place. If you can't find, please press Refresh Click
 Next and you should see this screen: (Make sure RSSI of your network should be more than 30, if not adjust the router)

	10.10.00.254	
Status Wizard Quick Set Advanced Upgrade Restart Reset	Please select your current wireless network: Site Survey Site Survey DIRECT-448D0855C 86:D2:44:80:85:C 37 1 DIRECT-448D0855C 86:D2:44:80:85:C 37 1 Scanbrands 28:C6:85:D5:09:FC 18 6 Scalis Guest 84:FB:E4:F4:58:F9 82 11 Solis 65:FB:E4:F4:58:F9 82 11 Solis 66:FB:E4:F4:58:F9 82 11 Solis 66:FB:E4:F4:58:F9 82 11 Solis 66:FB:E4:F4:58:F9 82 11 Solis 66:FB:E4:F4:58:F9 82 11 SS-WiFi E8:FC:AF:A3:90:D2 0 11 Solis 66:FB:E4:F4:58:F9 86 11 Stote: When RSSI of the selected WIFi network is lower than 15%, the connection may be unstable, please select other available network or shorten the distance between the device and router.	The setup wizard will assist you to complete the device setting within one minute.
	Add wireless network manually: Network name (SSID) Solis (Note: case sensitive) Encryption method Encryption method WPA2PSK © Encryption algorithm AES I 2 3 I 2 3 4	

11.Click on Show password option as it helps to see the password while you type in. Enter the password for your Home's Wi-Fi and press Next.

	10.10.100.254	Ċ	1 0 +
		中文 English Help	
Status Wizard Quick Set Advanced Upgrade Restart Reset	Please fill in the following information: Password (8-64 bytes) (Note: case sensitive)	Most systems support the function of DHCP to obtain IP address automatically. Please select disable and add it manually if your router does not support such function.	
	Web Ver:1.0.18		

12. You see this:

Note: You don't have to click or change anything, just click Next



13. Click OK and wait for sometimes till you see the screen at point 14. If you don't, refresh the page and do the setup again.

	10.10.254	Ċ 1 1 +
		中文 English
Status Wizard Quick Set Advanced Upgrade Restart Reset	Setting complete! Click OK, the settings will take effect and the system will restart immediately. I gou leave this interface without clicking OK, the settings will Back OK	Help After clicking OK, the system will restart immediately.
	Web Ver:1.0.18	

14. You should see this page

Note: This page is essential for the setup. If the restart is successful you should see this page



Refer to the other document "m.ginlong.com setup" that explains how to set m.ginlong.com and the android or iPhone app.